


Programming Quick Guide -DC9253A: Docking Scanner

Docking Scanner:

Gently tap the trigger area at the middle of scanner, to enable the scanner (for reading barcode)

Docking Scanner

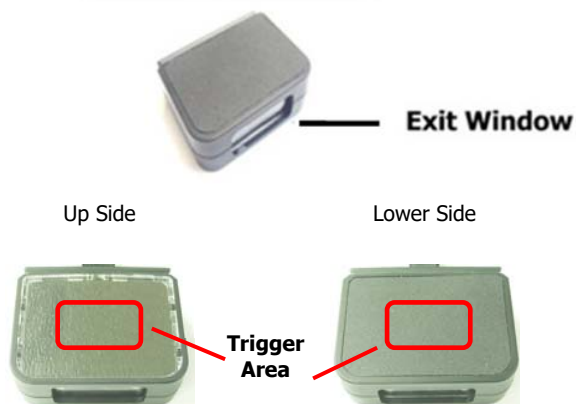

The touch sensor area is around middle of the scanner as drawing shown.



Installation

They are Plug & Play USB (HID) devices. When plugged into your Android OTG devices, it can be recognized as barcode scanner and begin to scan the barcode. Before using scanner, make sure the smartphone or tablet is fully charged. Open your APP, they can work as a keyboard input.

Reset Configuration to Default :

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan A1 to A2 for USB HID or B1 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



***Note :** Please install PL-2303 driver for USB serial

Keyboard Language (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



1D Symbolologies – 1



CODABAR



Code 39



Code 32



Code 39 FULL ASCII



Interleaved 25



Code93

















Matrix 25





IATA 25



1D Symbolologies – 2

| | | |
|---|-----------------|--|
| ENABLE  | <u>CODE 11</u> | DISABLE  |
| ENABLE  | <u>ISBT 128</u> | DISABLE  |
| ENABLE  | <u>GS1-128</u> | DISABLE  |
| ENABLE  | <u>TELEPEN</u> | DISABLE  |
| ENABLE  | <u>UPC-A</u> | DISABLE  |
| ENABLE  | <u>EAN-13</u> | DISABLE  |
| ENABLE  | <u>EAN-8</u> | DISABLE  |

1D Symbolologies – 3

| | | |
|--|-----------------------------|---|
| ENABLE  | <u>MSI</u> | DISABLE  |
| ENABLE  | <u>GS1 Omnidirectional</u> | DISABLE  |
| ENABLE  | <u>GS1 DataBar Limited</u> | DISABLE  |
| ENABLE  | <u>GS1 DataBar Expanded</u> | DISABLE  |
| ENABLE  | <u>CHINA POST</u> | DISABLE  |
| ENABLE  | <u>PLESSY CODEL</u> | DISABLE  |
| ENABLE  | <u>INDUSTRIAL 25</u> | DISABLE  |

- Information in this document is subject to change without notice.
- For more information, please visit:
www.riotec.com.tw

R_200325_01