


Quick Guide

-DC9252NP (with Battery)


-DC9252NN (without Battery)

1 H92P/H92N

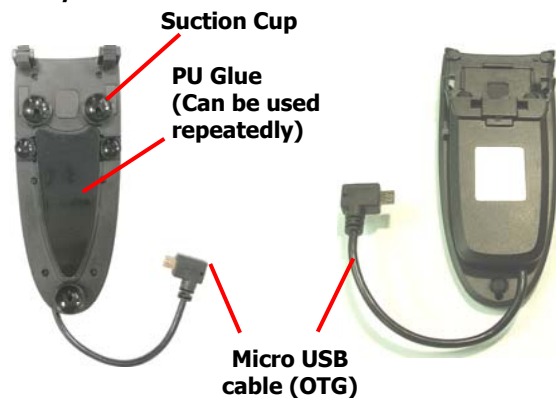

Connect to micro USB port of OTG device

2 H92P/H92N

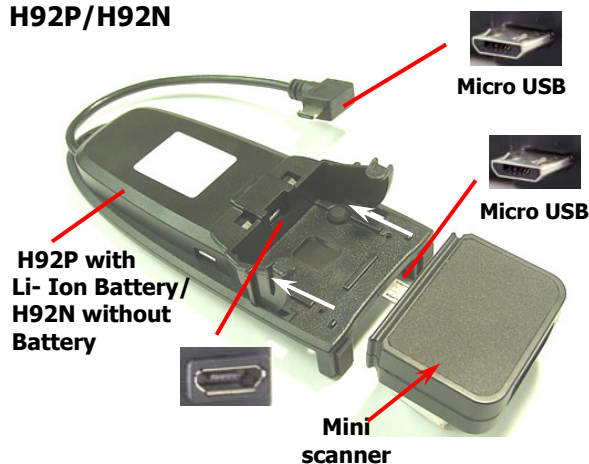

3

O = Operation mode


C = Charge mode



* Before you use it, please switch to "C" for battery charge for 3~4 hours.

* Under "C mode", you can raise/lower soft-keyboard easily.

4

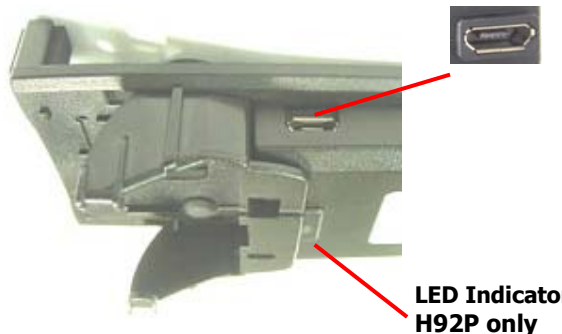

H92P Scan Holder is with Li-Ion battery inside. When in charging, please use the original power adaptor of smartphone (recommend). Through it, it charges both OTG device and H92P internal battery at the same time. When in low battery (Red LED flashing), please charge it immediately.

LED Indicator Information

Green LED OFF	Full charged (Charge mode)
Green LED ON	Charging (Charge mode)
Red LED Flashing	Low battery (Operation mode)

Attention: Under "Operation mode" please do not charging, otherwise the OTG device's battery will be charging back to H92P's battery.

5



The touch trigger is in the central area of mini scanner. (for both side). Please check the above drawing for your reference.

Installation

Before using scanner, please make sure that the OTG device is fully charged.

- Under USB HID interface
 - ** When plugged into OTG device, it will be recognized and begin to scan the barcode.
- Under USB Serial interface
 - ** Please install PL-2303 driver into your OTG device first. PL-2303 driver can be downloaded from Google Play
 - ** Connect scanner to your OTG device, then, you can know which serial port scanner connects to.
 - ** The data you scan will be sent to serial port and your APP can get the data from serial port directly.

Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 for USB HID or B1 to B2 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



* **Note:** Please install PL-2303 driver for USB Serial.

Keyboard Language (For USB HID Only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / ' \ < > ~

North American
Standard USB
Keyboard



French
Windows



French Canadian
Windows 2000/XP



Spanish
Windows



Swedish
Windows



Japanese
Windows (ASCII)



German
Windows



French Canadian
Windows 95/98



French Belgian
Windows



Italian
Windows



UK English
Windows



Portuguese-
Brazilian Windows



1D Symbolologies -1

ENABLE



Code 128

DISABLE



ENABLE



ISBT 128

DISABLE



ENABLE



Code 39

DISABLE



ENABLE



Code 39
FULL ASCII

DISABLE



ENABLE



Trioptic
Code 39

DISABLE



ENABLE



UPC-A

DISABLE



ENABLE



UPC-E

DISABLE



ENABLE



EAN-8

DISABLE



ENABLE



EAN-13

DISABLE



1D Symbolologies -2

Composite
CC-C

ENABLE



DISABLE



Composite
CC-A/B

ENABLE



DISABLE



Composite
TLC 39

ENABLE



DISABLE



Code 32

ENABLE



DISABLE



CODE 93

ENABLE



DISABLE



CODE 11

ENABLE



DISABLE



Interleaved 25

ENABLE



DISABLE



Discrete 25

ENABLE



DISABLE



CODABAR

ENABLE



DISABLE



1D Symbolologies -3



Interleaved 25



Discrete 25



MSI



Chinese 25



Matrix 25



GS1 DataBar



GS1 DataBar Limited



GS1 DataBar Expanded



2D Symbolologies



PDF 417



Micro PDF 417



Data Matrix



Maxicode



QR CODE



Micro QR CODE



Aztec



- Information in this document is subject to change without notice.
- For more information, please visit:
www.riotec.com.tw