


Programming Quick Guide -OM7220L

Installation

Make sure that the scanner has the correct cable to plug in the PC as below described:

***Note :** Please install PL-2303 driver for USB serial

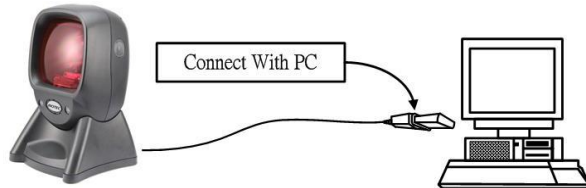

Reset Configuration to Defaults

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 to A3 for USB HID or B1 to B5 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



A1



B1



A2



B2



A3



B3



B4




B5

*** *Note:** Please install PL-2303 driver for USB Serial.

Barcode Configuration Method:

(Flow chart for setup procedure :)

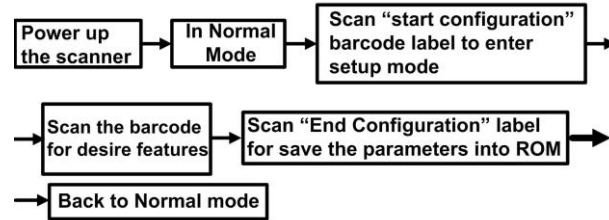

Start Configuration



End Configuration

Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / \ < > ~



USA



Japan



Denmark



Finland



France



UK



Italy



Norway



Turkey F



Turkey Q

Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States: @ | \$ # { } [] = / \ < > ~



Belgium



Spain



Germany



Russia



Austria



Portugal

Sweden

1D Symbolgies – 1



ENABLE

EAN-8



DISABLE



ENABLE

EAN-13



DISABLE



ENABLE

ISSN



DISABLE



ENABLE

ISBN



DISABLE



ENABLE


Codabar




DISABLE

Barcode Configuration Method:


(Flow chart for setup procedure :)

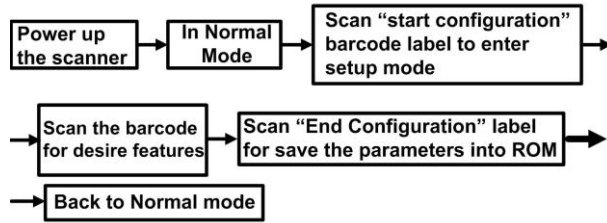

1D Symbolgies – 2

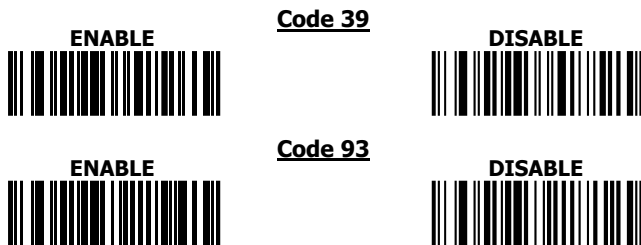

1D Symbolgies – 3

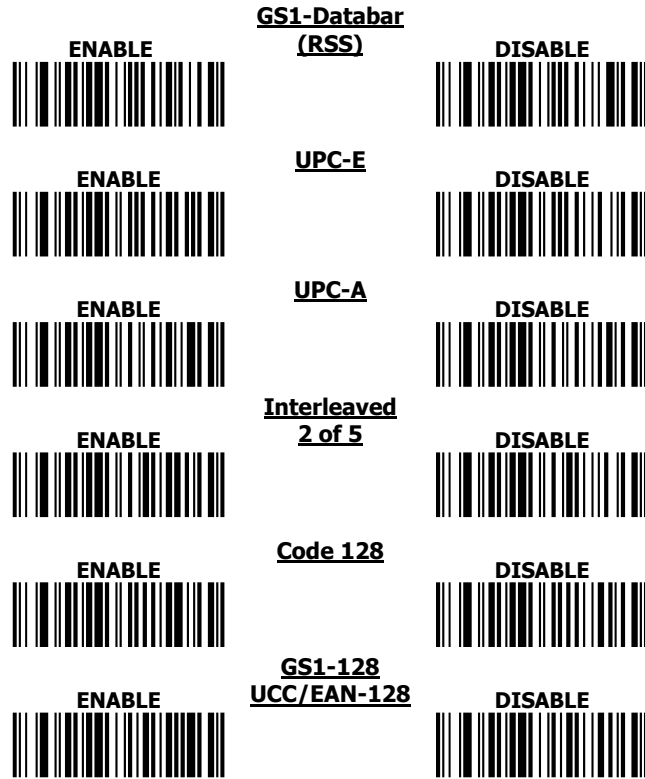

2D Symbolgies



Inter-Keystroke Delay (For USB HID only)
 This parameter specifies the delay between emulated keystrokes.



- Information in this document is subject to change without notice.
- For more information, please visit: www.riotec.com.tw