


Quick Guide

--DC9257LP (with Battery)
-DC9257LN (without Battery)

1 H92P

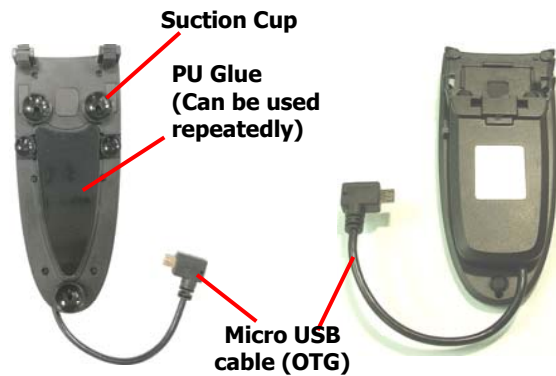


Connect to micro USB port of OTG device

2 H92P/H92N




3

O = Operation mode C = Charge mode

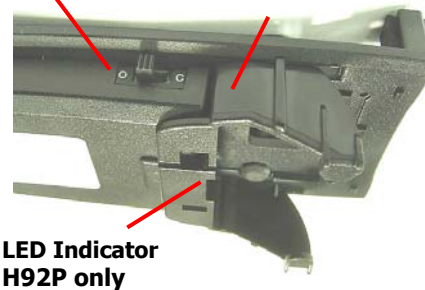

- * Before you use scanner, please switch to "C" for battery charge for 3~4 hours.
- * Under "C mode", you can raise/lower soft-keyboard easily.

4

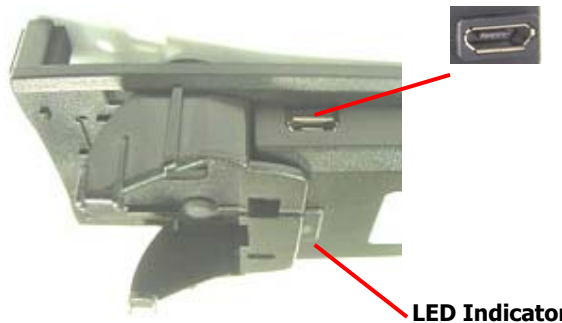

H92P Scan Holder is with Li-Ion battery inside. When in charging, please use the original power adaptor of OTG device (recommend). Through it, it charges both OTG device and H92P internal battery at the same time. When in low battery (Red LED flashing), please charge it immediately.

LED Indicator Information

Green LED OFF	Full charged (Charge mode)
Green LED ON	Charging (Charge mode)
Red LED Flashing	Low battery (Operation mode)

Attention: Under "Operation mode" please do not charging, otherwise the OTG device's battery will be charging back to H92P's battery.

5



The touch trigger is in the central area of mini scanner. (for both side). Please check the above drawing for your reference.

Installation

Before using scanner, please make sure that the OTG device is fully charged.

- Under USB HID interface
 - ** When plugged into OTG device, it will be recognized and begin to scan the barcode.
- Under USB Serial interface
 - ** Please install PL-2303 driver into your OTG device first. PL-2303 driver can be downloaded from Google Play
 - ** Connect scanner to your OTG device, then, you can know which serial port scanner connects to.
 - ** The data you scan will be sent to serial port and your APP can get the data from serial port directly.

Reset Configuration to Defaults


If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan from A1 to A3 for USB HID or B1 to B5 for RS232 or USB Serial. This will reset the scanner to its factory defaults.



*Note: Please install PL-2303 driver for USB Serial.

Barcode Configuration Method:

(Flow chart for setup procedure :)

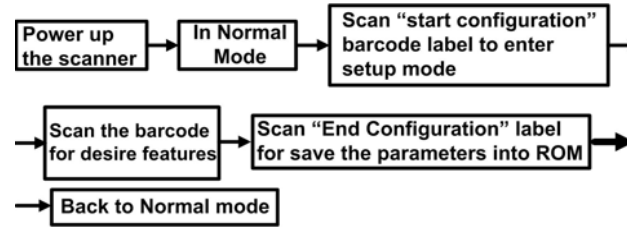

Start Configuration



End Configuration

Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



Belgium



Spain



Germany
Austria



Russia



Sweden



Portugal


Keyboard Country (For USB HID only)

Scan the appropriate country code as below to program the keyboard layout for your country or language. As a general rule, the following characters are supported, but need special care for countries other than the United States:

@ | \$ # { } [] = / ' \ < > ~



USA



Japan




Denmark




Finland




France



UK



Italy



Norway




Turkey F



Turkey Q

Barcode Configuration Method:

(Flow chart for setup procedure :)

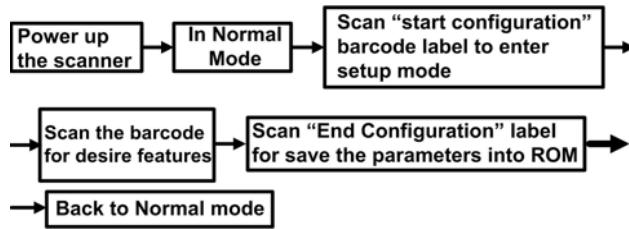

1D Symbolgies – 1



Code 93



Code 39



1D Symbolgies – 2



UPC-E



UPC-A



Interleaved
2 of 5



Code 128



GS1-128
UCC/EAN-128



1D Symbolgies – 3



EAN-8



EAN-13



Codabar



ISSN



ISBN





GS1-Databar
(RSS)




Barcode Configuration Method:

(Flow chart for setup procedure :)

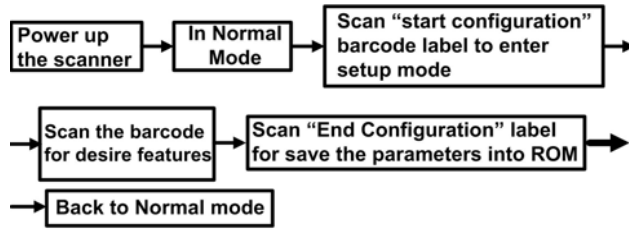

Start Configuration



End Configuration

2D Symbologies



ENABLE

Data Matrix



DISABLE



ENABLE

QR Code



DISABLE



ENABLE

Micro QR Code



DISABLE



ENABLE

PDF 417



DISABLE

Inter-Keystroke Delay (For USB HID only)

This parameter specifies the delay between emulated keystrokes.

No Delay



**Short Delay
(20ms)**



**Long Delay
(40ms)**



- Information in this document is subject to change without notice.
- For more information, please visit:
www.riotec.com.tw

R_200225_01